

Content

- Multi Branded Digital Tap Topper (x1)
- Bolt (x1) and Flexible Washer (x1)

Beer Tap handle not included





SCAN QR-CODE FOR HOW-TO-SET PRICING & NIGHT SLEEP VIDEO

<https://www.motiondisplay.com/Multi-Branded-Digital-Tap-Topper>

Display Control Buttons

Flip open display to access control buttons.

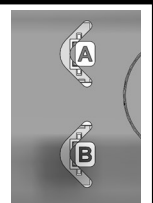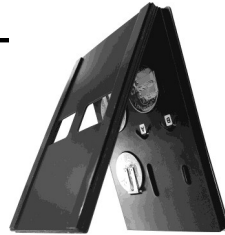

Animation On/Off
A ≥2 seconds

Enter/Exit Setting Mode*
B ≥2 seconds

Set Values (Setting Mode)
B Change position
A Change value **

Note!
Short press on both buttons simultaneously for **Night Sleep Setting**.

Setting Mode Overview

1

Position 2 3 4 5 6

B ↶ ↷ ↷ ↷ ↷ ↷ ↷

Setting Mode is indicated by a black background. Currently selected position is flashing.

A Value Range

	A	Value Range
1	PINT	or PITCHER
2	1	or blank
3	0-9	or blank
4	.	or blank
5	0-9	or blank
6	0-9	or blank


Note: If value is set to blank (don't show), a short flash indicates current position

* 20s idle will exit Setting Mode

** Changed values take effect immediately

Night Sleep Activation

The battery life length can be extended by activating the Night Sleep mode, and the display will sleep for 8 hours per day. During Night Sleep, the animation stops and shows the current PINT price together with a small moon symbol.

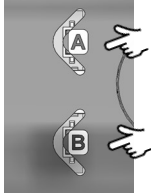

Note!

Short press on both buttons simultaneously moves into **Night Sleep Setting** with OFF blinking, indicating that Night Sleep (NS) is not activated.



A activates NS with proposed 12 hour left until display goes into NS. View shows “h 12”.

While “h xx” is blinking, **A** toggles between “OFF” and “h xx, i.e turns NS On/Off. If NS is turned “OFF”, last setting of “h xx” will be kept.



B moves to digits and **A** changes value. Note, the value range is 1-15. Holding down **A** counts up continuously. Holding down **B** for a long time exits NS setting—or just wait for “time-out”.

Night Sleep Hour “Check” and/or “Change”.

Note! During NS, the Dome Buttons on the display are turned off.

Move into NS Setting with a short press on both buttons simultaneously.

Display now tells how many hours left until NS. Example: If initial setting was “h 12” and two hours have past, the display will now show “h 10”).

By selecting digits with **B** and changing value with **A**, the new selection will be activated.

Holding down **B** for a long time exits NS setting—or just wait for “time-out”.

Note! If Display is in NS mode, **A** activates the display for one animation sequence, enough time to activate NS setting and chose a new time or turn “OFF” NS.

Replacing the Batteries




When it is time to replace the batteries, a battery symbol is shown and the display stops animating, showing the current PINT price, the so called End of Life view.

Flip open display to expose the batteries.

Remove and replace the batteries, the “+” sign facing up.

Close display.

*Do not mix old batteries with new ones.
Only use CR2450 batteries!*

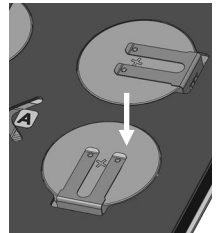

LEGAL DISCLAIMER:

MOTION DISPLAY SCANDINAVIA AB AND ALL ITS AFFILIATES DISCLAIM ANY AND ALL RESPONSIBILITY FOR USE OF MOTION DISPLAY PRODUCTS FOR OTHER PURPOSES THAN ITS INTENDED USE AS DESCRIBED IN THIS USER INSTRUCTION. INSTALLATION AND REMOVAL MAY ONLY BE PERFORMED BY AUTHORIZED PERSONNEL, AND SHALL BE MADE ONLY IN ACCORDANCE WITH THIS INSTRUCTION. MOTION DISPLAY DISCLAIM ALL RESPONSIBILITY FOR ANY INJURIES CAUSED BY WRONGFUL HANDLING OF THE PRODUCT, INCLUDING FROM ANY MATERIAL LEFT ON SHELF AFTER REMOVAL.